



Moloko Adjunct Personal Effects Receptacle Instructions

Hi there. Thanks for spending your hard-earned cash on this Surly product. Surly stuff is designed to be useful and durable. We're confident it will serve you well for years to come.

⚠ WARNING: Cycling can be dangerous. Bicycle products should be installed and serviced by a professional mechanic. Never modify your bicycle or accessories. Read and follow all product instructions and warnings including information on the manufacturer's website. Inspect your bicycle before every ride. Always wear a helmet.


For additional safety information about all Surly products visit: surlybikes.com/safety

Compatibility and Intended Use


The Moloko Adjunct Personal Effects Receptacle was designed to fit our Moloko Bar. Check with your bike shop or bar manufacturer for exact compatibility with other handlebars or racks.

⚠ WARNING: Maximum weight limit for the Moloko Adjunct Personal Effect Receptacle is 3.5 lb. When stacking or attaching additional cargo, the combined cargo weight should not exceed 3.5 lb. Overloading your bag and handlebar with additional weight may lead to product failure, resulting in an accident and serious injury.

Parts Included

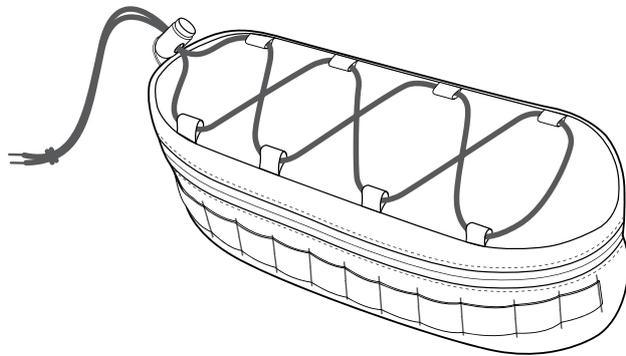

Moloko Adjunct Personal Effects Receptacle (x1)

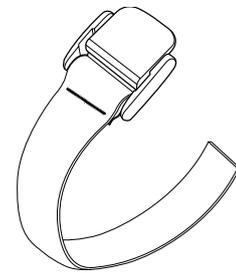

Strap (x4)

Assembly

The Moloko Adjunct Personal Effects Receptacle comes with some parts that need to be assembled with the bag before installing the bag to your Moloko bar.

1. Remove the four attachment straps from the inside the Moloko Adjunct Personal Effects Receptacle.
2. Weave one strap through each of the two rear ladder strap systems (Figure 1). On the front ladder strap system, weave the two remaining straps through the opposing ends of the system (Figure 2).
3. All four attachment straps must be used at all times to distribute weight evenly.

⚠ WARNING: Incorrectly installed straps may lead to the entanglement of straps or bag in the front wheel, resulting in a crash and serious injury. Check all four attachments and secure your bag before every ride.

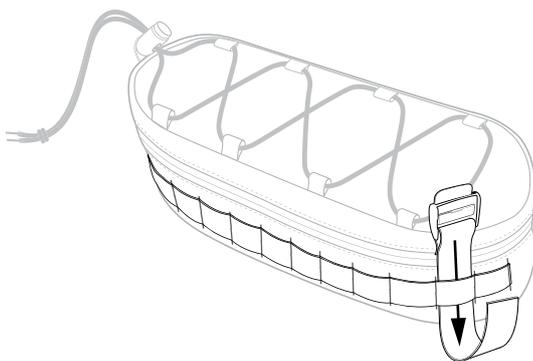


Figure 1

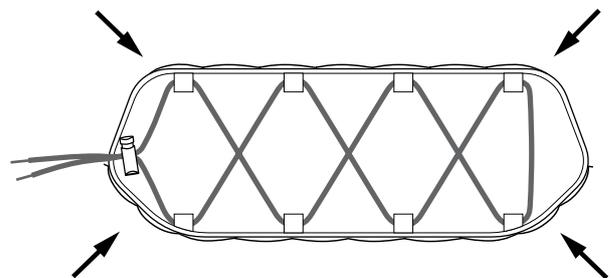


Figure 2

Installation

⚠WARNING: Entanglement of cargo or straps in your wheel could stop the rotation of the wheel, causing a loss of control or crash that could lead to serious injury. Pull on closure straps to ensure they are properly secured.

1. With your bicycle securely standing upright, place the Moloko Adjunct Personal Effects Receptacle in the center of the Moloko Bar (Figure 3).
2. Secure attachment straps around tubes of Moloko bar, securing the bag to the bar.
3. If using a light with an external battery pack, feed the cord through the port located on the front of the bag.

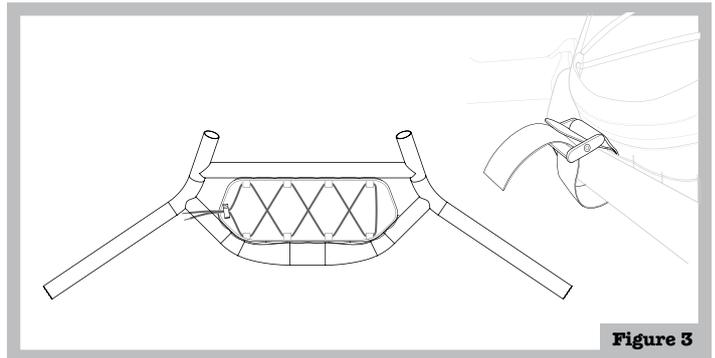


Figure 3

Ongoing Maintenance

Periodically check your Moloko Adjunct Personal Effects Receptacle for any signs of excessive wear. Ensure that each strap is secured and does not interfere with any moving parts on your bicycle. Spot clean with warm, soapy water as needed.

ZIPPER CARE

Periodically inspect the zipper on the Moloko Adjunct Personal Effects Receptacle for any dirt or missing and/or misaligned teeth. When necessary, clean the zipper with warm, soapy water. To avoid zipper blowout, avoid over-stuffing.

Limited Warranty

This Surly product is warranted against defects in materials and workmanship for one year from the date of retail purchase of the product, subject to the limitations detailed below. Save your dated receipt for proof of purchase.

This warranty does NOT cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the user or assembler
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Installation of components, parts or accessories not originally intended for or compatible with Surly product as sold
- Damage or deterioration to the paint, surface finish, aesthetics or appearance of the product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly

This limited warranty is expressly limited to the repair or replacement of a defective product, at the option of Surly, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the Surly product and is not transferable. This warranty applies only to products purchased through an authorized dealer or distributor. In no event shall Surly be liable for any loss, inconvenience or damage, whether direct, incidental, consequential, or otherwise resulting from breach of any express or implied warranty or condition, of merchantability, fitness for a particular purpose, or otherwise with respect to our products except as set forth herein.

This limited warranty gives the consumer specific legal rights, and those rights and other rights may vary from place to place. This limited warranty does not affect your statutory rights.

WARRANTY PROCESS

We will happily back up our products if there is a problem that is our fault. If you and your shop think your Surly product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OTHER PRODUCTS:

Give us a call for a free catalog or visit our website to check out all our stuff—you won't be disappointed.

Surly

6400 West 105th Street
Bloomington, MN 55438

The Watts Line: 877.743.3191

The Email: derby@surlybikes.com

The Web Address: surlybikes.com